



# **AM**900



# WL-0118 INSTRUCTION MANUAL





## **TABLE OF CONTENTS**



| Safety Regulations & Warranty                      | 3 |
|--|---|
| Service after Expiration                           | 3 |
| Copyright  | 3 |
| Feniex Product Copyright                           | 3 |
|  |   |
| Box Contents, Dimensions, Specifications, & Wiring | 4 |
| Box Contents_                                      | 4 |
| Dimensions   | 4 |
| Specifications                                     |   |
| Wiring Instructions                                |   |
| Mounting Instructions & Adjustment                 |   |
|  |   |

### **SAFETY REGULATIONS & WARRANTY**



#### **SAFETY REGULATIONS**

The following provides all the information necessary to safely operate the previously listed products of Feniex Industries, Inc. Please read this manual thoroughly before installing or operating your new product in order to prevent any damage or injury. Failure to follow the listed instructions in this manual may result in damage to your products or personal injury.

- Proper installation of this product requires good knowledge of automotive systems, electronics & procedures.
- Please guarantee all vital components of the vehicle are not in danger of being damaged by drilling holes necessary for installation. Check all sides of the mounting surface before drilling any holes into the vehicle.
- Do not install this product in any way that interferes
  with the deployment of the air bag. Doing so may
  damage the effectiveness of the air bag & can lead to
  serious personal and vehicle injury. The installer will
  assume full responsibility of proper installation of the
  new unit.
- Please clean the mounting surface before installation of the unit when using tape, brackets, magnet, Velcro or suction cups.
- The product's ground wire must be connected directly
  to the negative (-) battery post for effective use of the
  unit. Please follow all wiring guidelines provided to
  guarantee long lifespan & productivity. Failing to follow
  these instructions may result in damage to the product.

#### **WARRANTY**

Feniex Industries, Inc. warrants to the original purchaser that the product shall be free from defects in material & workmanship for 2 years from the date of purchase for all Public Works products.

If warranty service is needed, please contact customer support:

Phone: 1.800.615.8350

**Web Site:** www.Feniex.com/support **Email:** techsupport@feniex.com

If the product needs to be returned for repair or replacement, contact our customer service team (using any method listed above) to receive a Return Merchandise Authorization (RMA) number. Operational times are from 9 a.m. to 6 p.m. central time, Monday through Friday.

#### CONDITIONS

Feniex Industries, Inc. will not be held responsible for any costs associated with equipment removal and/or re-installation resulting from a warranty claim. It is the sole responsibility of the party initiating a warranty claim to pay shipping charges associated with returning a product to Feniex Industries for repair or replacement.

#### **SERVICE AFTER EXPIRATION**

Feniex Industries will still provide service for all products after expiration of the warranty. For any issues, call the customer support line. In some instances it may be necessary for the product to be shipped, freight prepaid and insured for loss or damage to Feniex headquarters.



Utilizing non-factory screws and mounting brackets may result in the loss of warranty coverage.

#### **COPYRIGHT**

This instruction manual and the Feniex products described in this instruction manual may include or describe copyrighted Feniex material. Laws in the United States and other countries preserve for Feniex Industries and its licensors certain exclusive rights for copyrighted material, including the exclusive right to copy, reproduce in any form, distribute and make derivative works of the copyrighted material. Accordingly, any copyrighted material of Feniex and its licensors contained herein or in the Feniex products described in this instruction manual may not be copied, reproduced, distributed, merged or modified in any manner without the express written permission of Feniex Industries, Inc.

#### **FENIEX PRODUCT COPYRIGHTS**

The products described in this document are the property of Feniex Industries, Inc. It is furnished by express license agreement only and may be used only in accordance with the terms of such an agreement. Products and documentation are copyrighted materials. Making unauthorized copies is prohibited by law. No part of the product or documentation may be reproduced, transmitted, transcribed, stored in retrieval system or translated into any language or computer language, in any form or by any means, without prior permission from Feniex Industries, Inc.

Please do not send in product without contacting support first for a Return Merchandise Authorization (RMA) number.

## **BOX CONTENTS, DIMENSIONS, SPECIFICATIONS, & WIRING**





| BOX CONTENTS                 | QUANTITY |
|------------------------------|----------|
| 1. Work Light                | 1        |
| 2. Stud Mount Swivel Bracket | 1        |

#### **DIMENSIONS**



#### **SPECIFICATIONS**

| Input Power   | 10 - 30 VDC              |  |
|---------------|--------------------------|--|
| Current Draw  | 500mA                    |  |
| External Fuse | 125% of Circuit Load     |  |
| Power Wire    | 16" Power & Ground       |  |
| Power Output  | 24 Watts                 |  |
| IP Rating     | IP67                     |  |
| Dimensions    | 4.4" W x 3.3" H x 2.2" D |  |
| Color         | Black                    |  |

#### **WIRING DIAGRAM**

| COLOR   | FUNCTION | POLARITY | CONNECTION                |
|---------|----------|----------|---------------------------|
| ■ Black | Ground   | 12v (-)  | Chasis Ground             |
| Red     | Positive | 12v (+)  | Positive Battery Terminal |

#### **WIRING INSTRUCTIONS**

Extend the black wire to a chasis ground & extend the red wire to a positive, latching switch.



Eye protection is recommended when testing this product.

### **MOUNTING INSTRUCTIONS**

- 1) Insert the M10x1.5x25mm bolt through the hole in the bottom of the swivel bracket
- 2) Line the swivel bracket up with the holes on the work light
- 3) Insert the M8x1.25x65mm bolt through both the bracket and work light
- 4) Place the washer and nut onto the M8 bolt and tighten
- 5) Drill a 9/16" hole in the mounting surface and insert the M10 bolt into the hole
- 6) Place the washer and nut onto the M10 bolt and tighten

To make adjustments, simply loosen both nuts and set the light to the desired angles, then tighten the nuts.